


Feather Flag with Clamp

R1.031618

ASSEMBLY HARDWARE

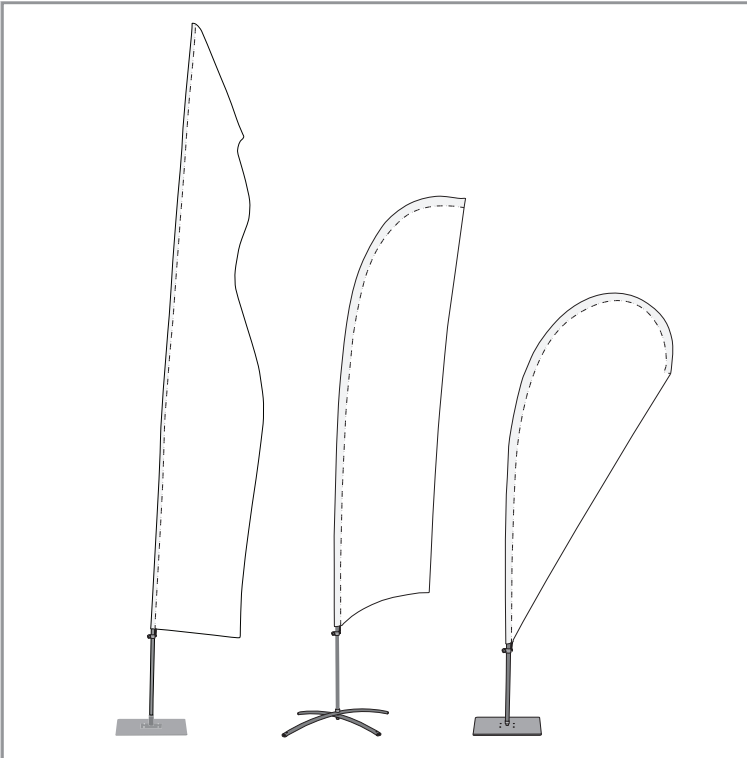


NOTE - THE AMOUNT OF POLES ARE DETERMINED BY THE SIZE OF THE FEATHER FLAG

Wind Speed Recommendations:

- Standard Single-Reverse: 25-30mph (6bft)
- Standard Double-Sided: 13-17mph (4bft)
- Premium Single-Reverse: 55-63mph (10bft)
- Premium Double-Sided: 39-46mph (8bft)




Clamp

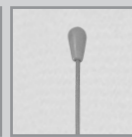


Tip

ASSEMBLY

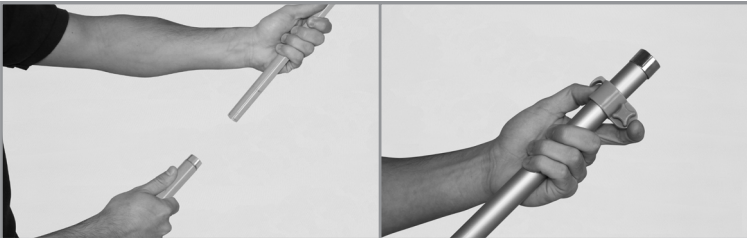


1. Assemble the pole set. Attach the poles together with the smallest-diameter pole at the top and the largest-diameter pole at the bottom.
2. Slide the clamp onto the bottom of the pole assembly (clamps are specific to the size of product).

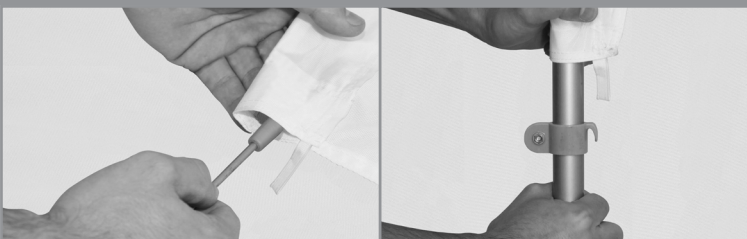

3. Insert the assembled pole set into the print pole sleeve.
4. The flexible fiberglass pole will curve to the shape when the flag is fully taut. Pull the print and the pole sleeve downwards towards the clamp located on the bottom pole.



5. Tighten the clamp at a location where the print will be fully taut. Pull print taut and attach tab to the clamp.
6. Make sure the tip of the pole is fully inserted into the reinforced pole tip on the print. Mount the whole assembly using one of the available bases.

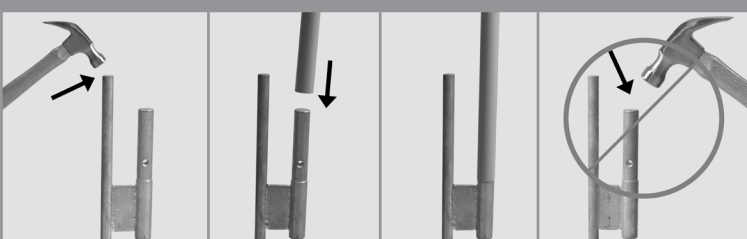

Ground Stake Assembly

1. To use the ground stake base, use a hammer to push the taller end of the stake base into the soil. Do not use a hammer on the shorter portion of the stake base damage to the base may occur.
2. Install the pole set by seating it on the smaller end of the stake base.


Do not fly this product in wind gusts exceeding what is listed below and/or thunderstorms. Standard pole sets with single-reverse flag: up to 30mph. Standard pole sets with double-sided flag: up to 17mph. Premium pole sets with single-reverse flag: up to 63mph. Premium pole sets with double-sided flag: up to 46mph. Do not use near overhead wires and allow a 4'-12' radius from base for flag clearance depending on size. User must read and observe assembly instructions. If this is not done correctly it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if this product is used with any flag or hardware not produced by us.



Feather Flag with Bungee

R1.031618

ASSEMBLY HARDWARE

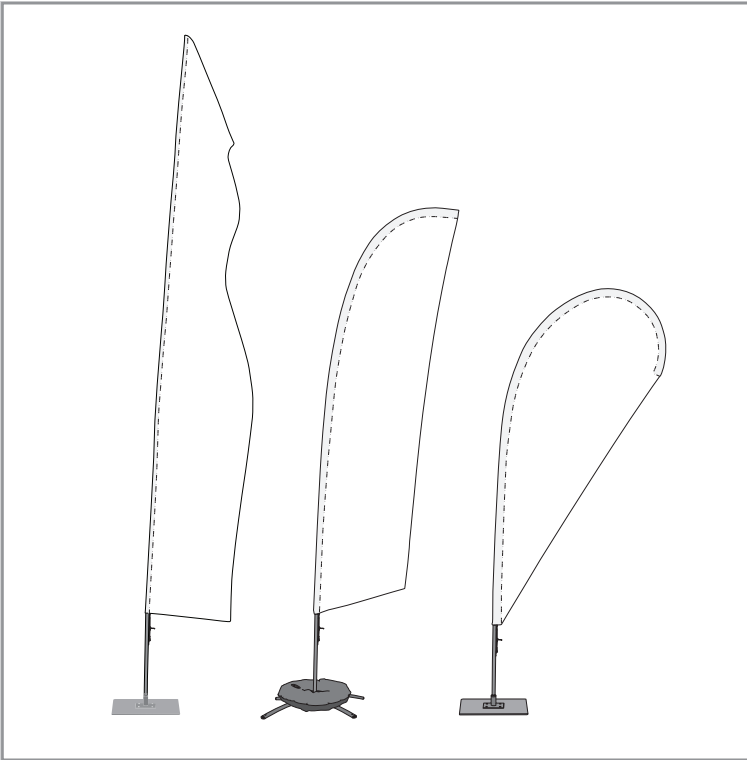


NOTE - THE AMOUNT OF POLES ARE DETERMINED BY THE SIZE OF THE FEATHER FLAG

Wind Speed Recommendations:


- Standard Single-Reverse: 25-30mph (6bft)
- Standard Double-Sided: 13-17mph (4bft)
- Premium Single-Reverse: 55-63mph (10bft)
- Premium Double-Sided: 39-46mph (8bft)




Spring Snap

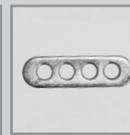

Bungee Cord
Tensioner

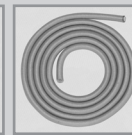

Bungee Cord

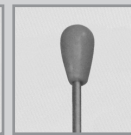


Tip




Fastener

ASSEMBLY

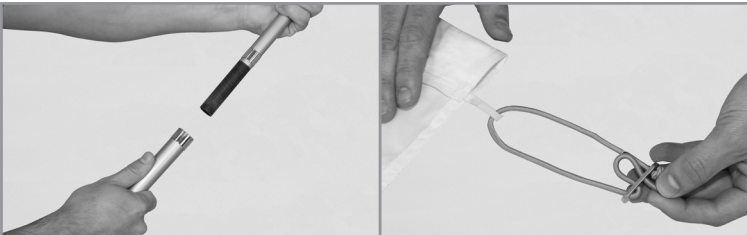


1. Assemble the pole set. Start from the largest-diameter pole on the bottom and work up to the smallest-diameter pole on the top – this is the only order the poles can be assembled in. The top pole is flexible fiberglass and has a tip, while the bottom pole has an attached fastener.

2. Remove one end of the bungee cord from the tensioner and slide it through the tab on the print. Feed the bungee cord through the spring snap before re-attaching it to the tensioner.

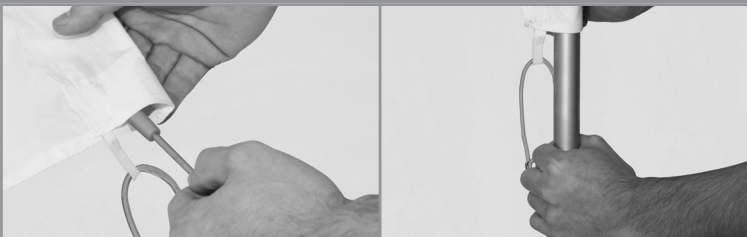

3. Insert the assembled pole set into the pole sleeve on the back end of the print. Make sure the tip of the pole is fully inserted into the reinforced pole tip on the print.


4. Pull the print and pole sleeve downwards toward the fastener located on the bottom pole. The flexible fiberglass top pole will curve to the shape of the flag once it's fully taut.

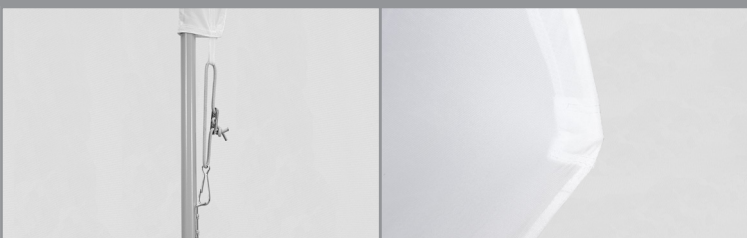

5. Attach the spring snap to the fastener. Mount the whole assembly to the base.

6. Adjust the bungee cord and tensioner to ensure that the print is fully taut when the spring snap is attached to the fastener.

7. Mount the whole assembly using one of the available bases.

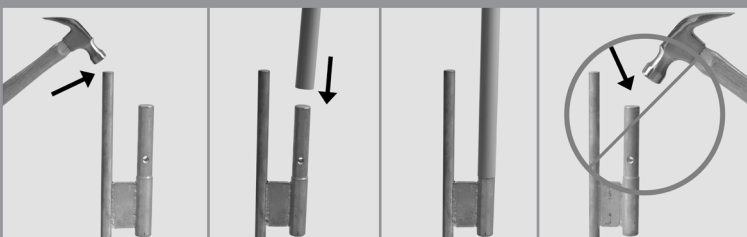

Ground Stake Assembly

1. To use the ground stake base, use a hammer to push the taller end of the stake base into the soil. Do not use a hammer on the shorter portion of the stake base – damage to the base may occur.

2. Install the pole set by seating it on the smaller end of the stake base.



Do not fly this product in wind gusts exceeding what is listed below and/or thunderstorms. Standard pole sets with single-reverse flag: up to 30mph. Standard pole sets with double-sided flag: up to 17mph. Premium pole sets with single-reverse flag: up to 63mph. Premium pole sets with double-sided flag: up to 46mph. Do not use near overhead wires and allow a 4'-12' radius from base for flag clearance depending on size. User must read and observe assembly instructions. If this is not done correctly it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if this product is used with any flag or hardware not produced by us.

