


Backpack Walking

R1.032012


BACKPACK WALKING BOWFLAG® & FLAG ASSEMBLY HARDWARE



A. Backpack with Mount
B. Print
C1&2. Fiberglass Poles
D1&2. Aluminum Poles

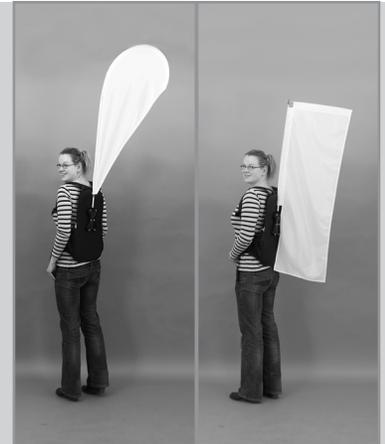

BACKPACK WALKING BOWFLAG® ASSEMBLY

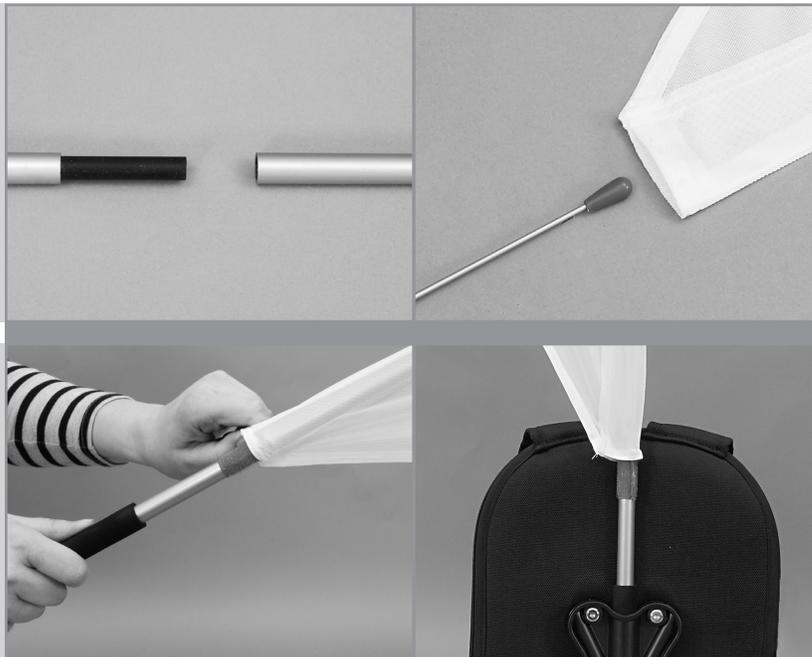

1. Slide all four poles (C1&2,D1&2) together until snug. If poles are not fitting, try using the opposite side of the pole or changing the order of the poles. (There is only one correct order for each pole segment).

2. Mount Print (B) by inserting the tip of the Fiberglass Pole (C1) into the strengthened end of the sleeve. Slide flag down the poles.

***Note: Be certain the tip of the pole is fully inserted into the strengthened end of the sleeve.**

3. Fix the lower end of the print sleeve to the hook-and-loop adhesive on the pole end.

4. Insert the end of the pole into the mount on the front side of the Backpack (A) until snug. Pole may be turned slightly.

BACKPACK WALKING FLAG ASSEMBLY



1. Slide the Aluminum Poles (D1&2) together until snug. Insert through the vertical pole sleeve of the Print (B). Loosen the screw on the end of the newly joined pole segment.

2. Insert the non-tip end of the Fiberglass Pole (C2) into the opening at the top of the Aluminum Pole (D1) as well as the horizontal pole sleeve of the Print (B). Continue until fully inserted. Tighten the screw which was loosened in Step 1.


3. Fix the lower end of the print sleeve to the hook-and-loop adhesive on the pole end.

4. Insert the end of the pole into the mount on the front side of the Backpack (A) until snug. Pole may be turned slightly.

Backpack Walking

R1.032012


BACKPACK WALKING BILLBOARD ASSEMBLY HARDWARE

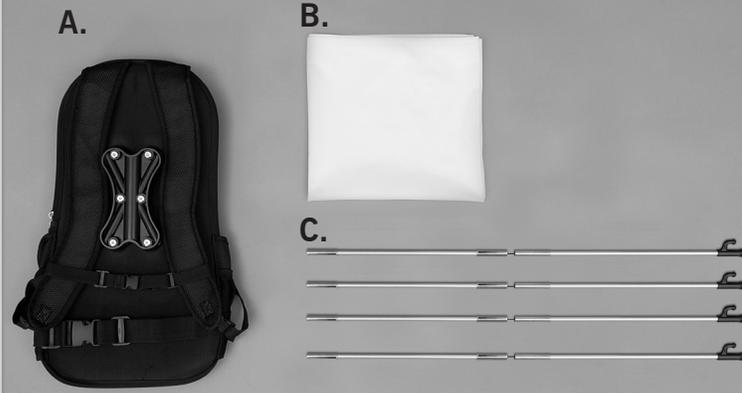

- A. Backpack with Mount
- B. Print
- C. Support Poles



BACKPACK WALKING BILLBOARD ASSEMBLY

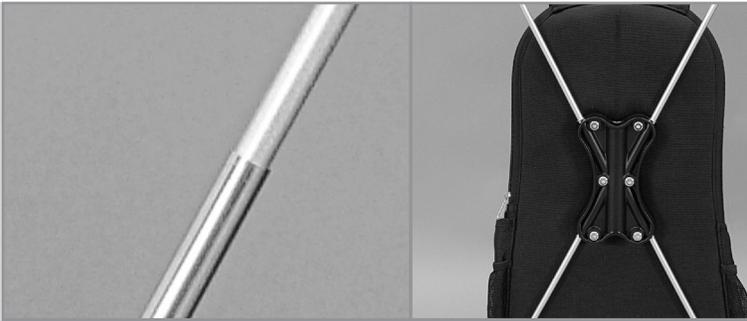

1. Assemble the Support Poles (C) together.
2. Insert all four of the assembled Support Poles (C) into the mount on the backside of the Backpack (A) until snug. Position the hooks facing towards you.



3. Once all four Support Poles (C) are mounted, locate the grommets at the corners of the Print (B) and attach to the hooks on top of the Support Poles (C). Mounting print to top hooks first is suggested.